


PSD14H PISTOL GRIP SCREWDRIVER PRODUCT # 404606

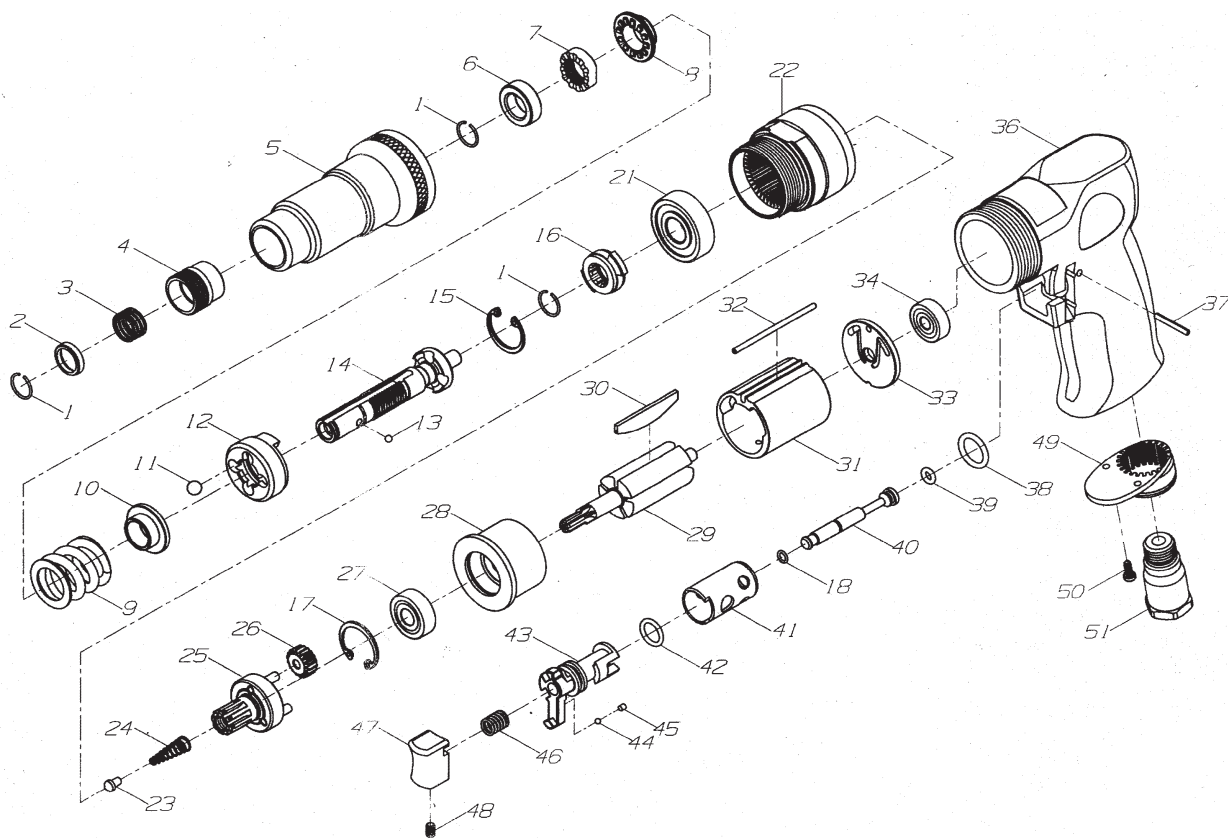

REF	PART NUMBER	DESCRIPTION	REQ	REF	PART NUMBER	DESCRIPTION	REQ
1	PUT-PSD14H-1	Retaining Ring	3	29	PUT-PSD14H-29	Rotor	1
2	PUT-PSD14H-2	Washer	1	30	PUT-PSD14H-30	Rotor Blade	5
3	PUT-PSD14H-3	Spring	1	31	PUT-PSD14H-31	Cylinder(Steel)	1
4	PUT-PSD14H-4	Ball Releaser	1	32	PUT-PSD14H-32	Motor Pin	1
5	PUT-PSD14H-5	Clutch Housing	1	33	PUT-PSD14H-33	Rear End Plate	1
6	PUT-PSD14H-6	Sleeve Bearing	1	34	PB626-2Z	Ball Bearing	1
7	PUT-PSD14H-7	Adjusting Nut	1	36	PUT-PSD14H-36	Motor Housing	1
8	PUT-PSD14H-8	Washer	1	37	PUT-PSD14H-37	Pin	1
9	905761	Spring set	1	38	PUT-PSD14H-38	O-Ring	1
10	PUT-PSD14H-10	Ball Seat	1	39	PUT-PSD14H-39	O-Ring	1
11	PUT-PSD14H-11	Steel Ball	4	40	PUT-PSD14H-40	Throttle Valve	1
12	PUT-PSD14H-12	Clutch Carrier	1	40P	PUT-PSD14H-40P	O-Ring	1
13	PUT-PSD14H-13	Steel Ball	1	41	PUT-PSD14H-41	Reverse Valve Bushing	1
14	PUT-PSD14H-14	Cam Spindle	1	42	PUT-PSD14H-42	O-Ring	1
15	PUT-PSD14H-15	Retaining Ring	1	43	PUT-PSD14H-43	Reverse Valve	1
16	PUT-PSD14H-16	Drive Dog	1	44	PUT-PSD14H-44	Steel Ball	1
21	PB6201-2Z	Ball Bearing	1	45	PUT-PSD14H-45	Detent Rubber	1
22	PUT-PSD14H-22	Gear Housing	1	46	PUT-PSD14H-46	Spring	1
23	PUT-PSD14H-23	Spring Guide	1	47	PUT-PSD14H-47	Trigger	1
24	PUT-PSD14H-24	Spring	1	48	PUT-PSD14H-48	Screw	1
25	PUT-PSD14H-25	Carrier	1	49	PUT-PSD14H-49	Exhaust Deffuser	1
26	PUT-PSD14H-26	Planet Gear	3	50	PUT-PSD14H-50	Screw	2
27	PB608-2Z	Ball Bearing	1	51	PUT-PSD14H-51	Air Inlet	1
28	PUT-PSD14H-28	Front End Plate	1	52	PUT-PSD14H-52	Hex Wrench	1
28P	PUT-PSD14H-28P	Retaining Ring	1	53	PUT-PSD14H-53	Wrench	1